
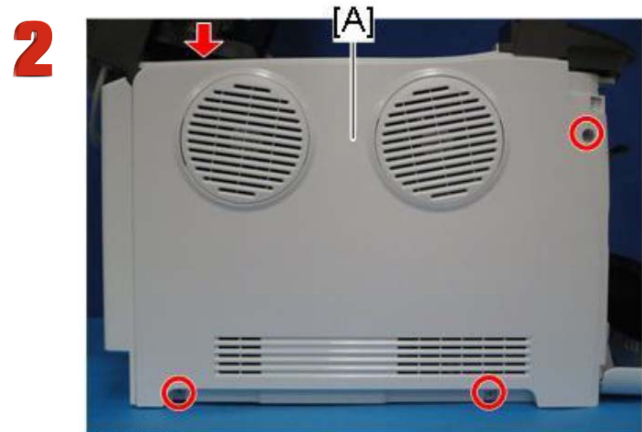




UNINET ICOLOR

IColor 560 - Replacing the Fusing Unit

⚠ Make sure that the fusing unit is cool before you touch it. The fusing unit can be very hot.

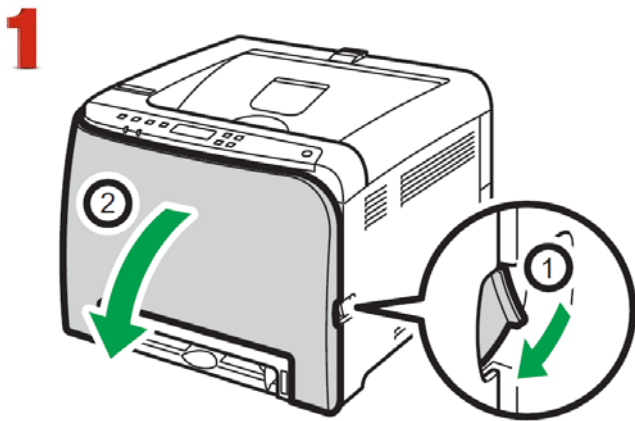

1. Open the front cover.
2. Release the top hook, remove 3 screws and remove the left cover [A].

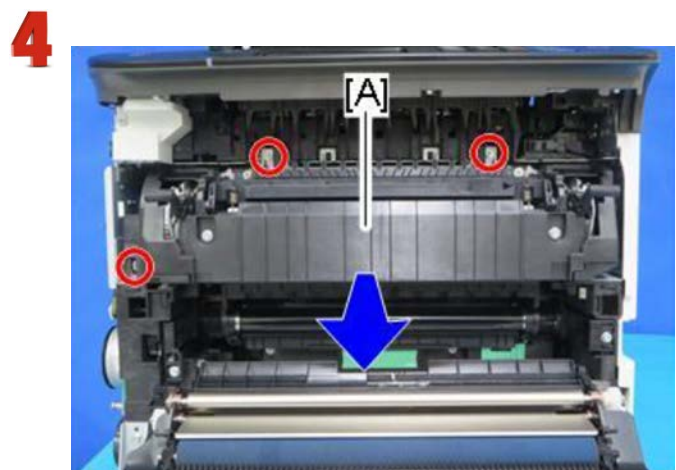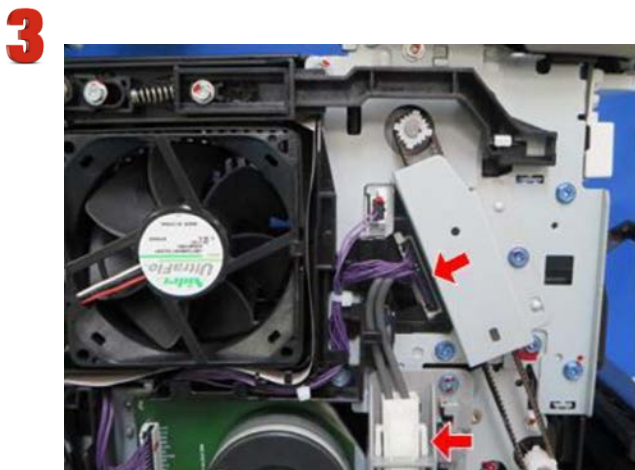

3. Carefully disconnect the two connectors.
4. Remove 3 screws from around the fusing unit and carefully pull forward with both hands.
5. To install a new fusing unit, follow the above steps in reverse order.